
FleXFire different modes

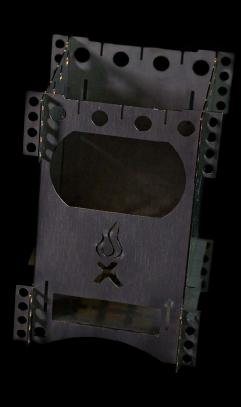







FlexFire 4 & 6

Potholder also used for easy handling

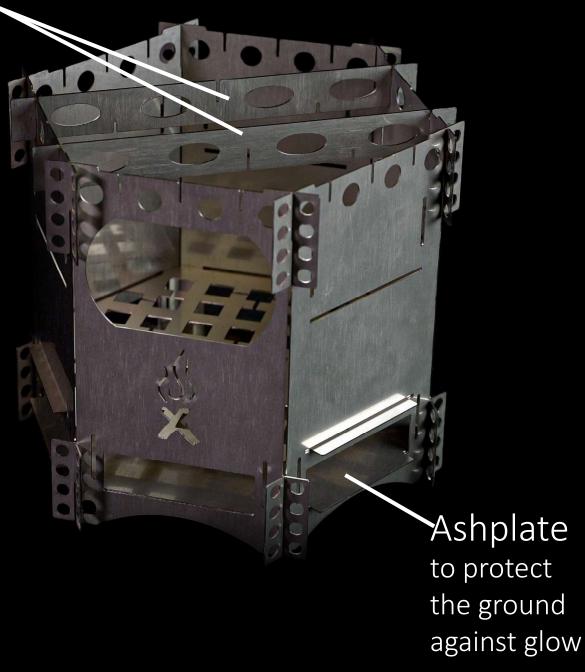



FlexFire 4 & 6

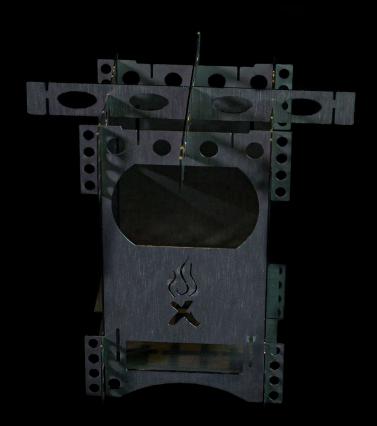


Potholder

to use for small pots and cups, more stability for pans and heavy pots





FlexFire 4 & 6

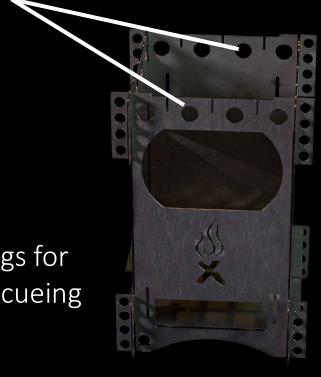

Holes to use also tent pegs for cooking and barbecueing weight reduction and more stability



FlexFire 4 & 6

Fire supply cutout to refill wood while cooking second cutout addable for more accessibility








GRILL MODE

FlexFire 4 & 6

Grillplate

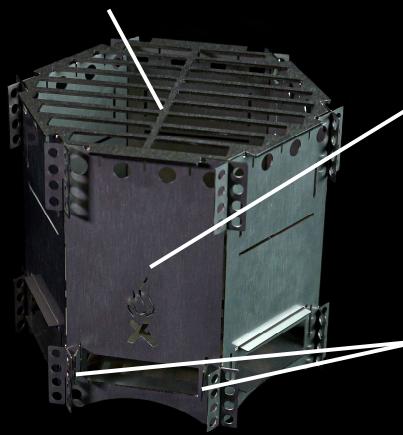


Frontplate Grill without cutout for more capacity

Potholder secure the Frontplate Grill


Baseplate on higher position for better heat control

Ashplate to protect the ground and to reduce airflow for longer glow of the coal

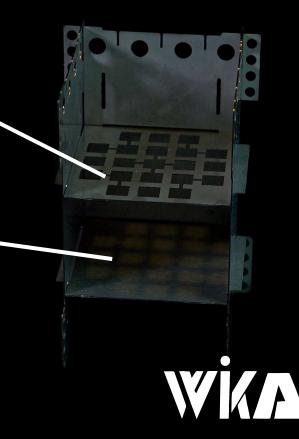


GRILL MODE

FlexFire 4 & 6

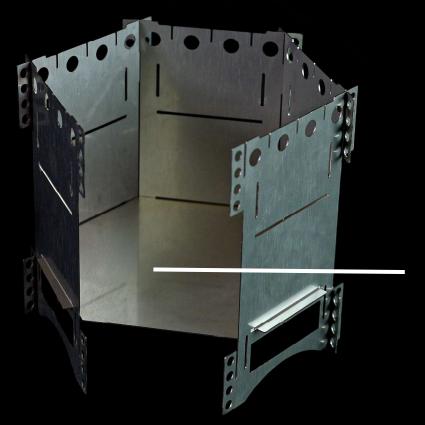

Ashplate on low position for really slow burn with coal

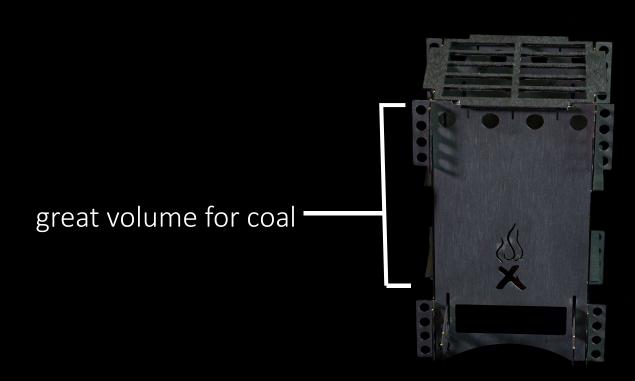




FUEL MODE

FlexFire 4 & 6



Baseplate
Trangia on high position

Trangia burner more stability and protection against wind

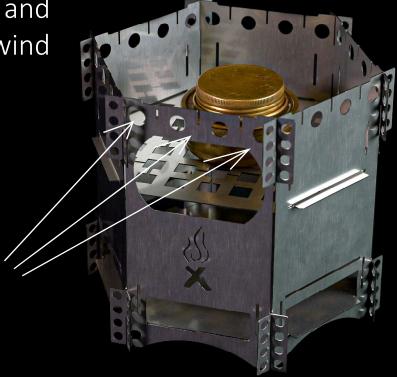

Holes direct fresh air



FUEL MODE

FlexFire 4 & 6



Potholder Trangia on high position





FUEL MODE


FlexFire 4 & 6



still use of the potholders possible for more stability

Efficency perfect distance to the pot




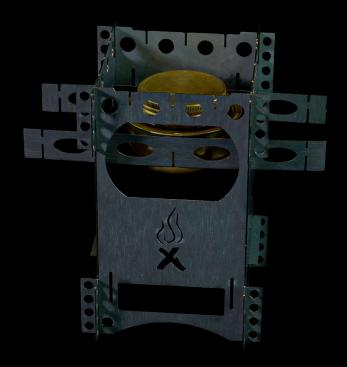




GAS MODE

FlexFire 6

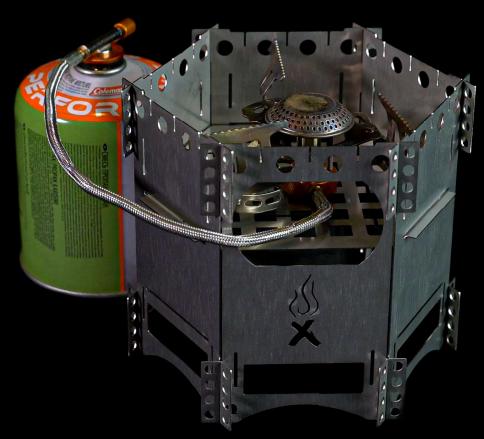

still use of the potholders possible for more stability

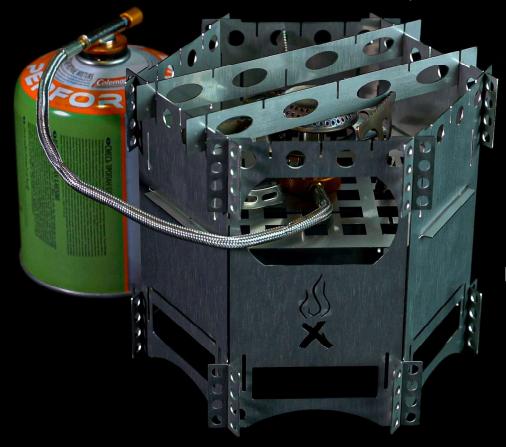


Safety more stability and secure handling




GAS MODE

FlexFire 6

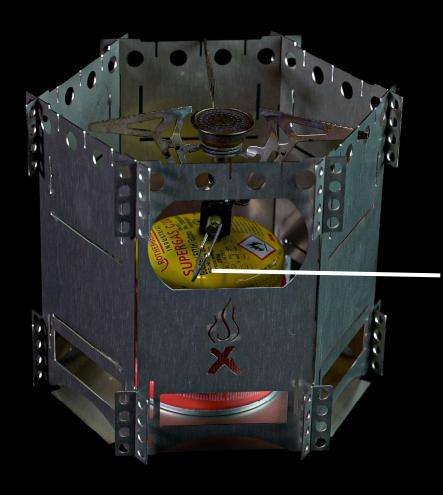

Easy control cutout to adjust the power

Efficency protection angainst wind

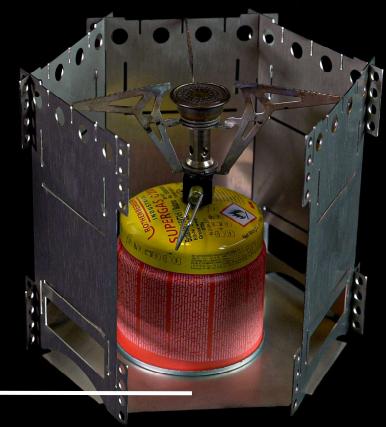

Stability plain base for a perfect position




SOLID MODE

FlexFire 4

Safety

more stability and secure handling

Baseplate position for solid fuel like Esbit or gel-burner

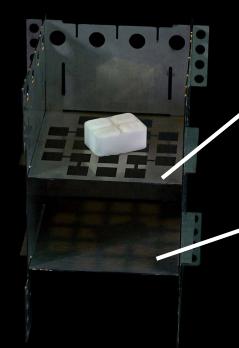

Ashplate ground protection against dropping liquids

Easy refill cutout to add fuel

